

Alba Racing Heavy Flywheel installation

- REMOVE SKID PLATE
- REMOVE FLYWHEEL GUARD
- REMOVE YOKE FLANGE RETAINING BOLTS
- REMOVE FLYWHEEL RETAINING BOLTS
- INSTALL AND TQ NEW FLYWHEEL TO 27 FT/LBS. (Use high strength thread loc on the bolts)
- INSTALL YOKE FLANGE AND TQ TO 27 FT/LBS
- INSTALL FLYWHEEL GUARD AND TQ TO 7.2 FT/LBS

Please note that some people have been able to install the flywheel

without removing the flywheel guard. Seek professional installation if

needed. Alba Racing is not responsible for damage, or injury caused by

improper installation. Tq values must be followed.

Contact Alba Racing

at 619-562-0188 for any questions.