



RZR FUEL CONTROLLER INSTRUCTIONS

- 1) Remove both front seats. Remove the plastic back center panel behind the seats using an at20 torx wrench.
- 2) Route the controller wire harness thru the hole in the plastic panel behind the drivers seat. The hole is above the rectifier (silver metal box with fins).
- 3) Locate the two electrical connectors that are to the left of the coils. Disconnect one of them and connect one pair of leads from the controller into them. It does not matter which pair you use. Be sure that the pair you use come from the same section of wire. Repeat this with the other set of electrical connectors.

See picture 1:



- 4) Locate the black ground wire on the controller and connect this to the negative terminal on the battery.
- 5) Use the double sided tape and attach the controller to a convenient place inside the storage box under the drivers seat. Be sure to clean the area you are attaching the tape to.

See picture 2:



The controller comes pre-programmed for a stock engine with an Alba exhaust and filter. If you have a different engine combination follow the attached tuning instructions. If you have any questions you can contact us for advice on the proper tuning for your particular configuration.