

Alba Racing Honda 300EX nerf Bar instructions

NOTE: For safety leave your stock heel guards installed. They are removed for clarity in these instructions. Do not ride your quad without them!

- 1) Install the front nerf mount (chrome tube with flat bar welded to it. Use the longest #8 bolts - 1 per side. Install them but do not tighten them yet. See picture for how they mount.




- 2) Mount the nerf bars one side at a time. See picture below for the mount tab placement on the footpeg. Slide the nerf bar on to the front mount. It will swivel back and forth allowing you to line up the footpeg mount with the holes in the foot peg. Note - Use the # 6 bolt and nut with a #6 flat washer on the outside peg hole(farthest away from the quad). Use the flat washer on the head side of the bolt. Use the #8x20mm long bolts for the hole closest to the frame. Use a #8 flat washer on the nut side. Repeat this process for the other side nerf bar.



3) Now tighten all the bolts. There are 6 total to tighten. Don't miss any.

4) Install the nets according to the diagram. (**Be sure to leave enough slack on the shifter side so you can get your foot under the shifter.**)

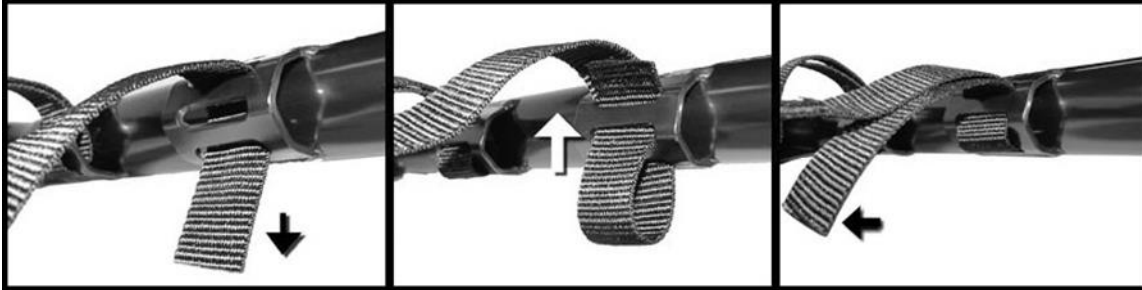

Hint for net install—First, find the 'end' piece that faces the quad !

5) You are now ready to ride. After your first ride check all the bolts to be sure they are tight. Thereafter check the at least every 3 rides and more often if needed.

Questions? call us at 619 .562. 0188 M-F 9 to 6 Pacific time