

ALBA RACING

Alba Pro Peg Nerf Bar Installation TRX 400EX and 400X


- 1) Remove foot pegs and heelguards.
- 2) Install the footpeg mounts using the stock Allen bolts. (The shifter side has an L stamped on it and the brake side has an R stamped on it). Tighten these bolts. See Picture.



- 3) Remove the forward motor mount bolt (12mm wrench). Use a spacer, a forward nerf mount and a provided long bolt. Install but do not tighten yet. See Picture.



- 4) Slide the nerf bar on both the forward and foot peg mounts at the same time. Use a long bolt to put through the hole in the nerf and the foot peg mount. Install the locknut but do not tighten.
- 5) Tighten the footpeg bolt, the front mount bolt and the front clamp bolt.
- 6) Install the nets – follow the diagram below.

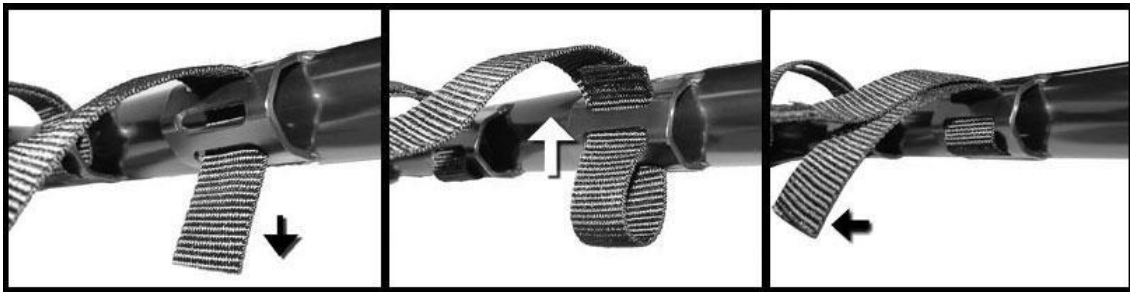

- 1) CALL US WITH ANY QUESTIONS OR COMMENTS 619 562 0188.
- 2) After your first ride check all nuts and bolts for tightness. After that check them every 4 rides.
- 3) NOTE: Over time items such as nets and foot pegs wear. Contact us for replacement parts. We carry them in stock.



- 4) CALL US WITH ANY QUESTIONS OR COMMENTS (858) 413-2598.
- 5) After your first ride check all nuts and bolts for tightness. After that check them every 4rides.
- 6) NOTE: Over time item such as nets and foot pegs wear. Contact us for replacement parts. We carry them instock.

