



## **ALBA PROPEG NERF BAR INSTRUCTIONS --HONDA TRX 250R 1988 and 1989**


- 1) Remove left and right side foot peg and heelguard assemblies. Install Alba footpegs as shown in the picture. (use high strength Loctite).**




- 2) Install front mount as shown in picture. Use supplied spacers.**



- 3) Make sure you push your nerf bar tube fully on before tightening the clamp. (see picture above)**
- 4) Install supplied bolt and nylok nut through each footpeg. Tighten using Loctite. See pic. (X is on bolt)**

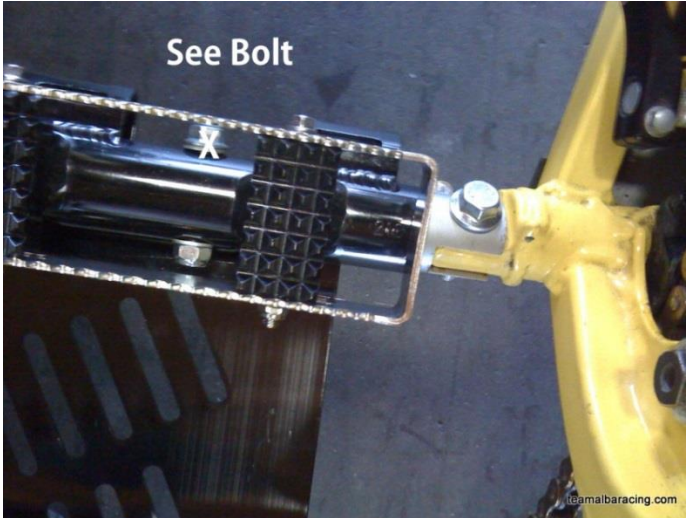

- 5) Double check all hardware, making sure everything is tight. (Make sure to do this after your first ride and every few rides thereafter).
- 6) Install the nets following the picture below:

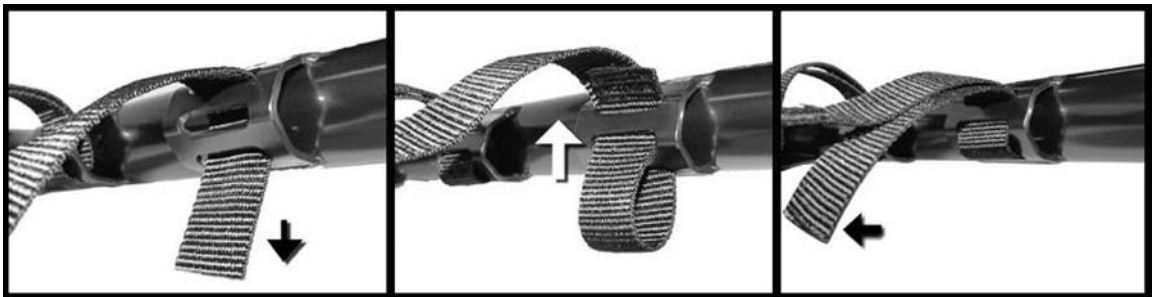

Please contact us @ [support@albaracing.com](mailto:support@albaracing.com) or give us a call @ 619-562-0188 if you need any assistance.

**TeamAlbaRacing.com 10806 Prospect Avenue, Santee CA 92071**