



KAWASAKI KFX 700 ALBA PRO PEG NERF BAR INSTRUCTIONS

- 1) Remove left and right side foot peg and heelguard assemblies. Remove the rear fender stay bracket. Note that this bracket has a tab sticking out when it meets the frame. This tab will have to be ground off.
- 2) Mount the foot peg mounts to the frame (see pic 1) Note that there is an "L" and an "R" stamped on each mount. "R" goes on the brake side, "L" on the shifter side. Use the supplied #10 bolts with locktite on them. Tighten them. See pic. #1.




PICTURE 1

- 3) Mount the forward nerf bar mounts. (see pic 2) Use the provided short #8 bolts. Tighten these bolts. Be sure the bolt is tight because you won't be able to check it once the nerf bar is installed. See pic. #1



PICTURE 2

- 4) Slide the nerf bar on each side. Line up the hole on the nerf bar under the foot peg with the hole in the nerf mount tube. Use the provided long #8 bolt and nylok nut. Tighten these. Tighten the 2 (each side) foot peg bolts and nuts –these pegs are adjustable – put them where you like them.
- 5) Use the stock bolt to mount the nerf stay to the frame. Be sure to grind off the fender stay tab and mount it at the same time. Bolt it back to the fender before you tighten the frame bolt. Tighten both bolts (fender and frame).
- 6) Tighten the allen bolt on the nerf bar clamp on each side.
- 7) Install the nets following the picture below.

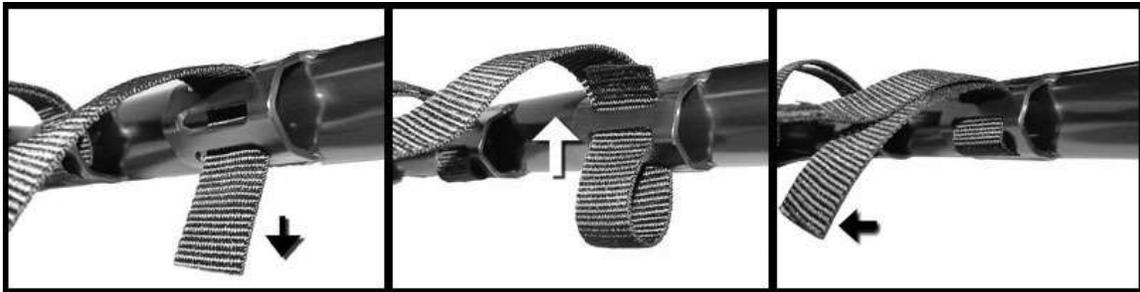

- 8) Re-check all bolts and nuts for tightness.
- 9) After your first ride check all bolts and nuts for tightness.

If you have questions or problems please call us at (858) 413-2598.

TEAM ALBA RACING ----TEAMALBARACING.COM

12160 COMMUNITY RD POWAY CA 92064

858 413 2598 M-F 9 TO 6 SAT 9 TO 4 PACIFIC TIME

