




YAMAHA YFZ 450R ALBA PRO PEG NERF BAR INSTRUCTIONS

- 1) Remove left and right side foot peg and heelguard assemblies. Save the foot peg bolts for re-use.
- 2) Mount the foot peg mounts to the frame. Note that there is a "L" and an "R" stamped on each mount. "R" goes on the brake side, "L" on the shifter side. Note that the tube is not welded centered on the flat bar. Use the original bolts with locktite on them. Tighten them.
- 3) Remove the rear lower motor mount bolt on each side. (see the picture)



- 4) Mount the forward nerf bar mounts. (see the picture) Use the provided short #8 bolts and spacers. Do not tighten yet.

- 5) Slide the nerf bar on each side. Line up the hole on the nerf bar under the foot peg with the hole in the nerf mount tube. Use the provided long #8 bolt and nylok nut. Tighten these. Tighten the 2 (each side) foot peg bolts and nuts –these pegs are adjustable – put them where you like them.
- 6) Now tighten both sides of the forward nerf bar bracket bolts (1 each side). Tighten the allen bolt on the nerf bar clamp.
- 7) Install the nets following the picture below.

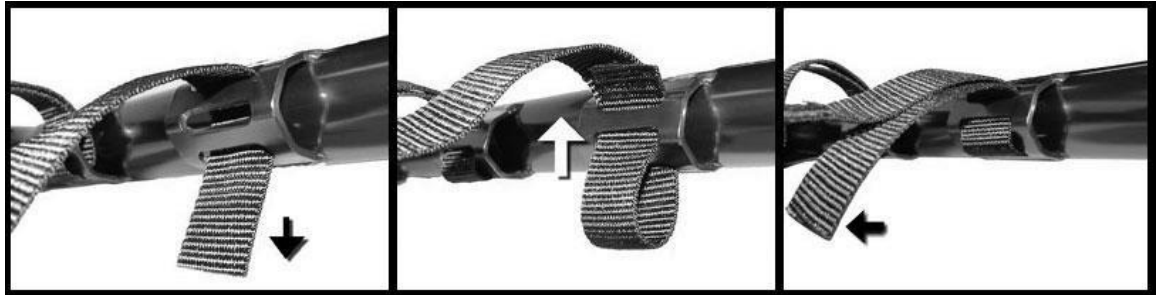

- 8) Re-check all bolts and nuts for tightness.
- 9) If you have any questions please call us. We are here to help!
- 10) HAVE FUN AND RIDE SAFELY!

ALBA RACING 12160 COMMUNITY RD POWAY, CA 92064
(858) 413-2598 9 TO 6 M-F 9 TO 4 SAT. (PACIFIC TIME)
TEAMALBARACING.COM

