




INSTALLATION INSTRUCTIONS FOR TRX450 PRO ELITE NERF BARS

- 1) Remove rear lower engine mount bolt (12mm socket) on both sides of quad.
- 2) Remove the pin that holds the black plastic foot well guard to the foot peg.
- 3) Mount the chrome bar mount to the motor mount where you took the bolt out. The tab will go towards the rear of the bike. (See Picture)




Use the long bolt in this sequence: Do not tighten bolt yet!

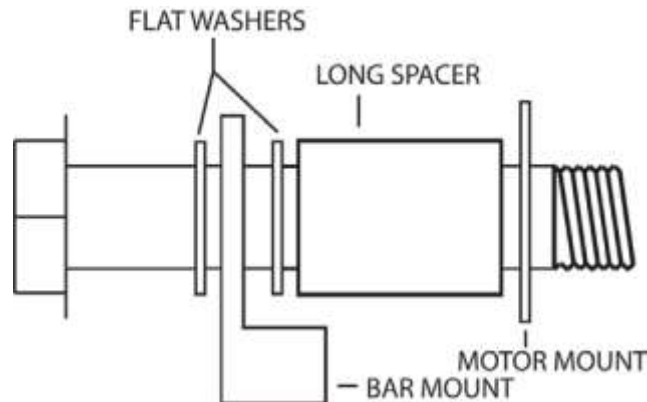


- 4) Slide Nerf bar over the bar mount and line up the outside peg mount hole with the foot well guard hole. Install one of the supplied short bolts + nuts. Don't tighten yet!
- 5) Using a 5/16" drill bit start a hole in the foot peg for the inner bolt hole.



- 6) Take out the outside bolt and let the bar hang down giving you room to drill the hole thru the foot peg.
- 7) Now install the nerf bar to the foot peg. It is easiest to put in the bolt you just drilled a hole for first. Be sure to use the short aluminum spacer between the bar mount plate and the peg.(See Picture)

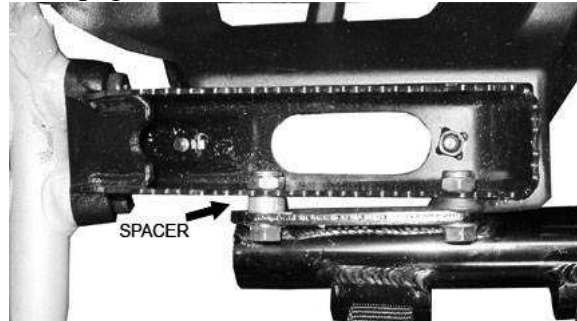

- 8) Now you may tighten all bolts
- 9) Install the 2 nylok nuts left over on the front bar mount bolts to lock the bolt to the frame.
- 10) Install the nets following the diagram.

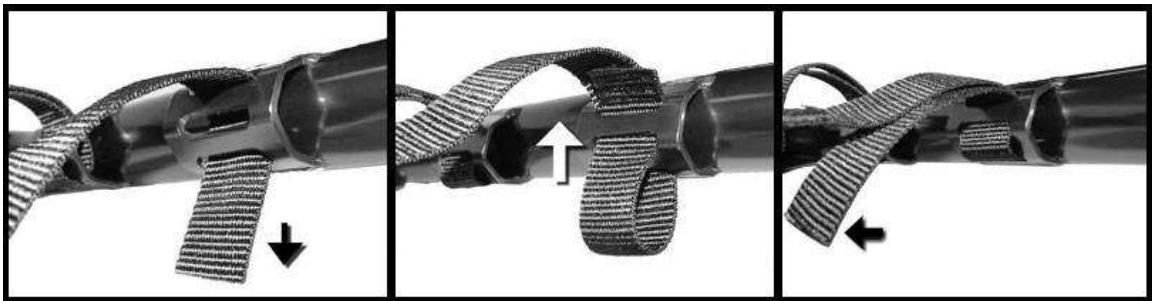

- 11) Check all bolts for tightness.
- 12) Have fun and be safe!

Note: You may have 4 extra washers – they are not needed.

Please call if you have any questions. We're open M – F (Pacific Time) till 6PM.
