




Polaris Outlaw Pro Elite Nerf Bar Instructions

- 1) Remove the nut and washer on the lower rear a-arm bolt (the one closest to the engine). Do this on both sides.
- 2) Mount the chrome front nerf bar mount with the tabs on these two bolts. Put the nuts back on and tighten them.
- 3) Slide the front of the nerf bar over this mount and line up the holes on the mount tab with the holes in the footpeg. Use the supplied bolts washers and nuts. Tighten these. Repeat this for the other side.
- 4) Assemble the nets to the nerfs following the picture. (see below)
- 5) Check all your nuts and bolts to be sure they are tight.
- 6) After your first ride and periodically thereafter check all nuts and bolts for tightness.

If you have questions or comments we like to hear from you. Give us a call at (858) 413-2598.

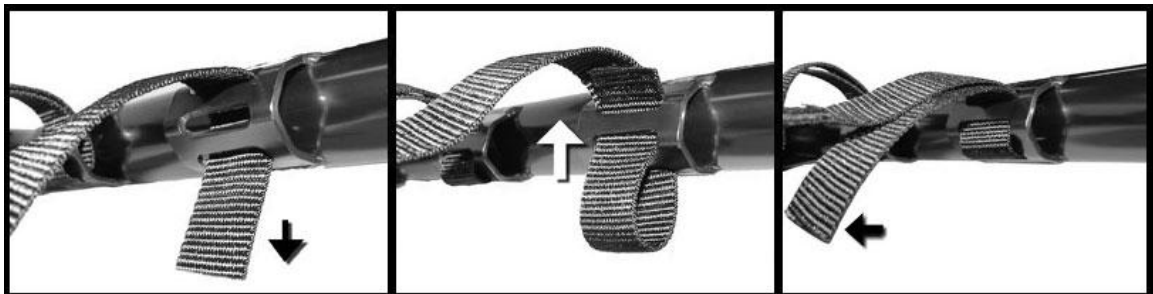

TEAM ALBA RACING **12160 POWAY RD, POWAY CA 92064**
TEAM ALBA RACING.COM
858 413 2598 M-F 9 TO 6 SAT – 9 TO 4