




INSTALLATION INSTRUCTIONS FOR LTZ400 PRO ELITE NERF BARS

- 1) Remove the front engine mount bolt (bolt 14mm socket, nut 17mm socket) *Note: It is best to reuse this bolt and nut. There may be a replacement bolt and nut included, but the bolt is too long. See picture:*




- 2) Slide one of the chrome bar mounts on the bolt you just removed, slide the bolt back thru the engine mount, put the other chrome bar mount on the end of the bolt, then install the nut. Do not tighten the nut yet! (See above picture)
- 3) Doing one side at a time, slide the front of the nerf bar over the chrome bar mounts and line up the nerf's rear mount to the holes in the foot pegs. Install the bolt, washer and nut. See picture: *Note: 2003 LTZ400's do not have these holes. Simply line up the nerf bar, using its holes to mark where to drill on the foot peg and drill a hole for each bolt to go through.*

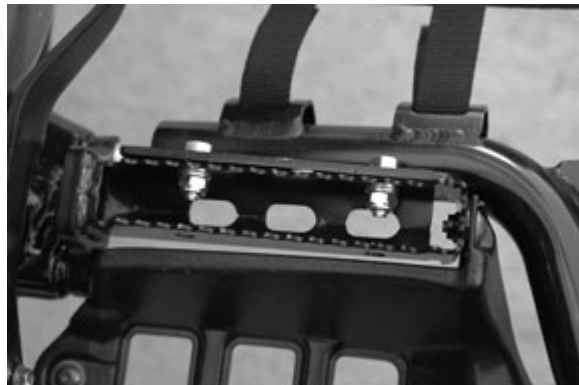

- 4) Tighten the foot peg bolts first, then tighten the engine mount bolt.
-

ALBA RACING

- 5) Check to be sure all bolts are tight.
- 6) Install the nets according to the diagram:

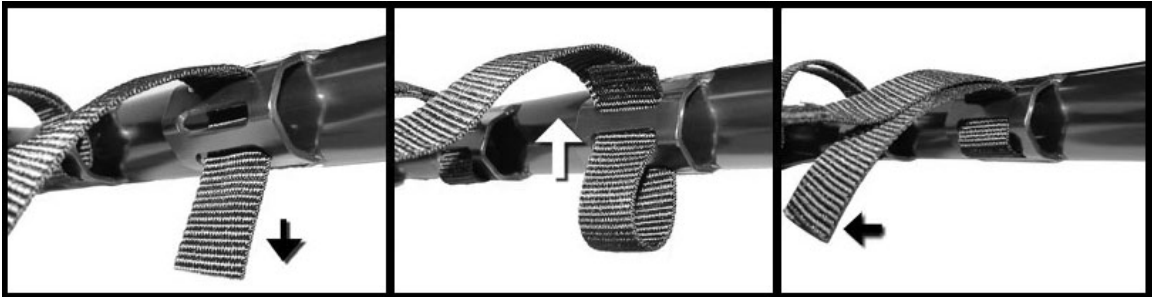

- 7) Enjoy the ride and be safe!

