

TEAM ALBA RACING YFS 200 BLASTER STANDARD NERF BAR INSTRUCTIONS


1) Remove the front long motor mount bolt and nut (see picture #1). Mount the front chrome nerf bar mount – Use the supplied long bolt and spacers and nut. **Note that the short spacer goes on the shifter side and the long spacer goes on the brake side.** See picture #1 for a guide. Install the nut but do not tighten it yet.

2a) Install the nerf bars. **Please read 2b before proceeding.** Slide the front tube over the front mount (see picture #1) Look at picture #2 to see how the mount tabs fit to the foot pegs. Use the supplied bolts, washers and lock nuts. Do not tighten the bolts yet. Repeat this for the other side nerf bar.

2b) If you have an early year Blaster you will need to drill holes in the footpeg for the nerf mount tab. Use a 3/8" drill bit. Hold the mount tabs against the footpeg and mark the holes, then drill them. You can use picture # 2 for a guide. Once the holes are drilled follow step 2a.

3) Now tighten all the bolts. It is best to do the bolts on the footpeg first; then do the motor mount bolt.

4) Install the nets following the diagram below.

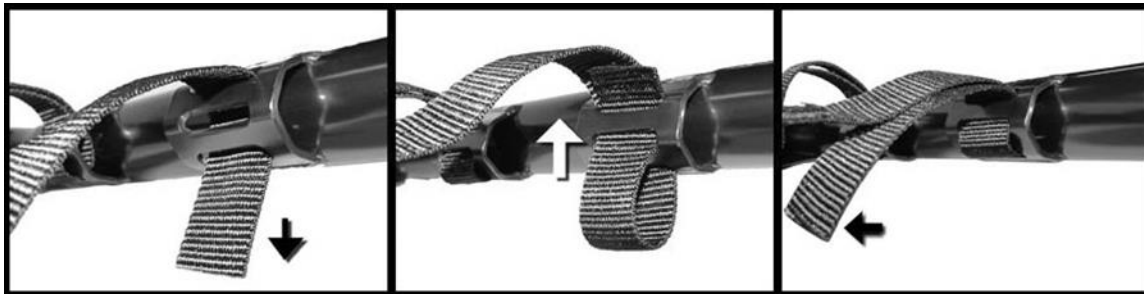

5) Double check all the nuts and bolts for tightness. Go ride and have safe fun! After your first ride, and every few rides thereafter, recheck bolts and nuts once again.



Picture 1



picture 2