





INSTALLATION INSTRUCTIONS FOR ALBA PRO ELITE RAPTOR NERF BARS

- 1) Remove the 2 forward engine mount bolts (14mm socket) that go thru the lower frame. *(The kit may supply 2 new bolts and nuts to replace the stock ones, it is your choice which ones to use.)*
- 2) Mount the chrome tube with the tabs facing backwards. Use the same bolts you removed in step 1. (see picture)

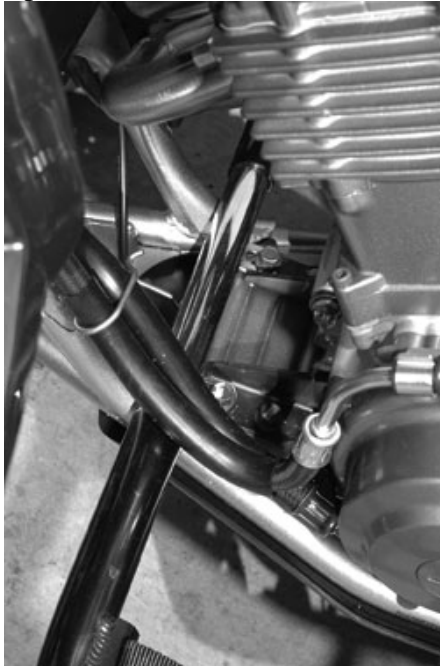


Note: The bar will go under the water and oil lines. Be sure you don't pinch the reverse cable under the mount bracket. Do not tighten the bolts yet!

- 3) Slide both nerf bars over the mount bar and install the bolt and nut thru the 2 holes in the nerf and foot peg on each side. See picture:

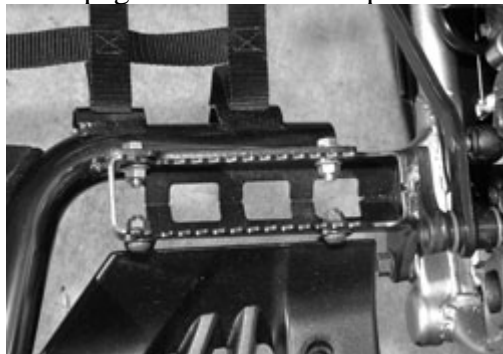

ALBA RACING

- 4) Tighten the bolts thru the pegs first, then tighten the 2 engine mount bolts.
- 5) Install Nets as shown

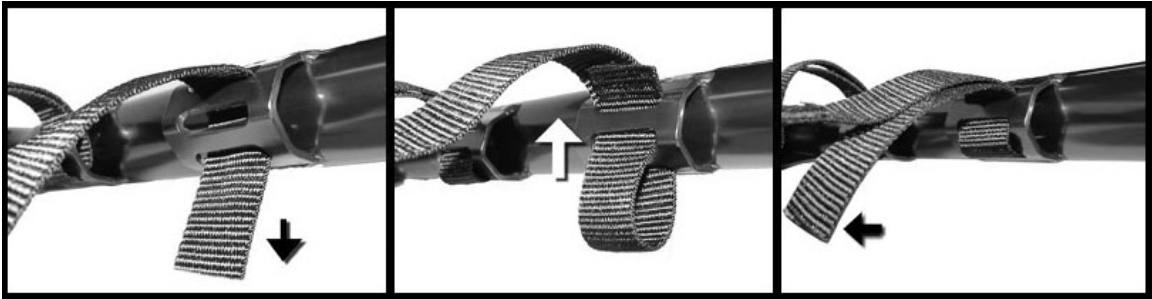

- 6) Check all bolts to be sure they are tight



- 7) Have fun and be safe!