



RAPTOR 125 AND 250 ALBA PRO ELITE NERF BAR T1 INSTALLATION

- 1) Start on the shifter side of the quad. Using a #14 socket remove the forward LOWER engine mount bolt and washer. Save it for reuse when installing the front nerf bracket. (see picture # 1 for bolt location)
- 2) Determine which nerf fits on the shifter side and insert one of the forward mount brackets in the front tube. Now mount the rear mount plate to the front of the footpeg using the supplied bolts, washers and nuts (2 sets per side). Do not tighten the bolts yet. See picture # 2
- 3) Mount the front bracket using the bolt and washer you removed from the engine mount. Hand tighten only. See picture #1
- 4) Tighten the footpeg bolts and then tighten the front mount bolt.
- 5) Repeat steps 1 thru 4 for the brake side.
- 6) Install the nets following the diagram.
- 7) Re-check to be sure all the bolts are tight. -- After your first ride check them again. After every 3 rides check the bolts for tightness.

If you have any question please contact us at the phone # below or e mail us.




Picture 1



Picture 2

Install the nets following the picture below:

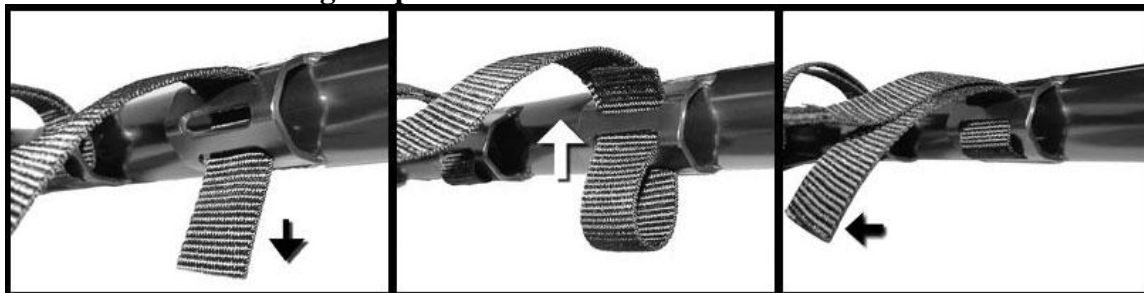

Alba Racing 10806 Prospect Avenue, Santee CA 92807 619-562-0188 www.teamalbaracing.com

Alba Racing 10806 Prospect Avenue, Santee CA 92807 619-562-0188 www.teamalbaracing.com