




**INSTALLATION INSTRUCTIONS
ALBA PRO ELITE
RAPTOR 350 NERF BARS**

- 1) Remove the 2 forward engine mount bolts (14mm socket) that go thru the lower frame. (*The kit includes a replacement longer bolt, nuts, spacers and washer.*)




- 2) On both sides of the quad, loosely mount the chrome tube with the tabs facing backwards using the included hardware. (see picture)
See photo below for assembly order. Make sure that the spacers are in the correct position between the chrome mounting hole and the frame.

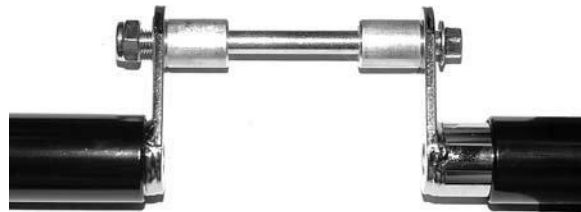


- 3) Slide both nerf bars over the mount bar. Do not tighten bolts yet!



- 4) Install the bolt and nut thru the 2 holes in the nerf and foot peg on each side.
(See picture:)

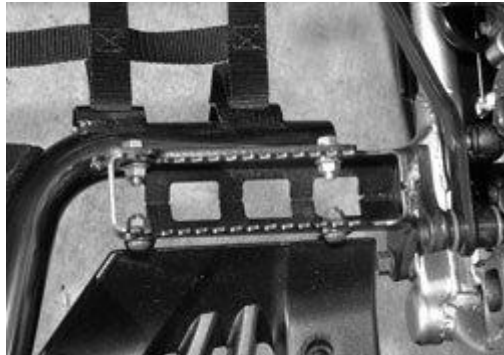

- 5) Tighten the bolts thru the pegs first, then tighten the 2 engine mount bolts.
- 6) Install Nets as shown

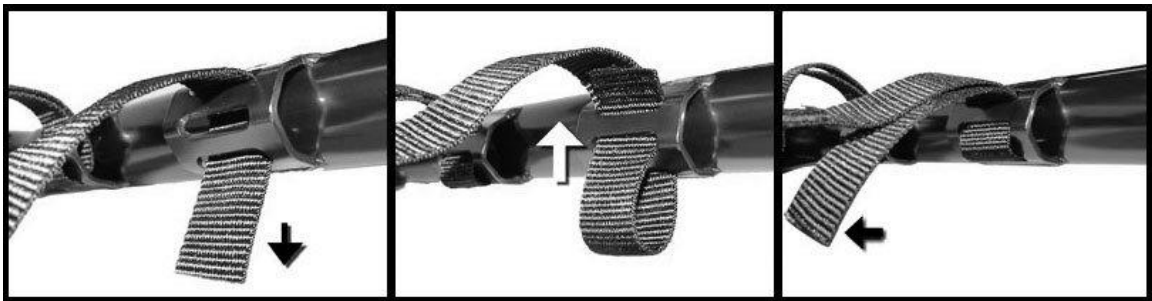

- 7) Check all bolts to be sure they are tight



- 8) Have fun and be safe!

