




INSTALLATION INSTRUCTIONS FOR ALBA PRO ELITE YFZ450 NERF BARS

- 1) Remove the rear lower bolt from the front engine mount. (12mm socket) on both sides. (See picture.)




- 2) Mount the chrome bar mounts into this hole. Use the allen head bolts in the following sequence: Do not tighten the bolts yet!

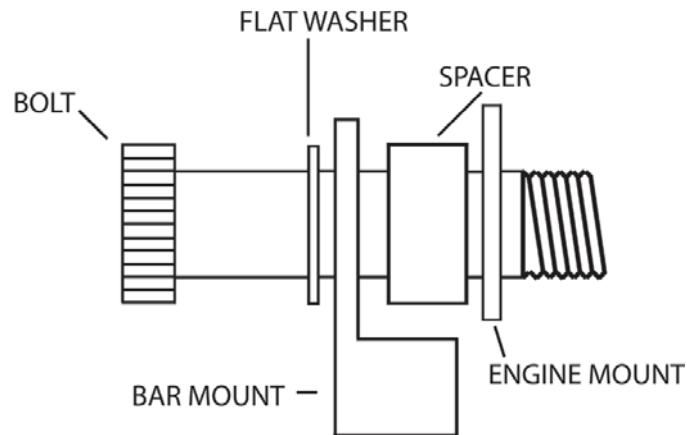


- 3) Slide the front tube of the nerf bar onto the bar mount. Line up the rear nerf mount bracket holes up with the holes in the foot peg and install the bolt then the washer and nut. You may tighten these nuts now as well as the front allen bolt. (See picture)
-

ALBA RACING

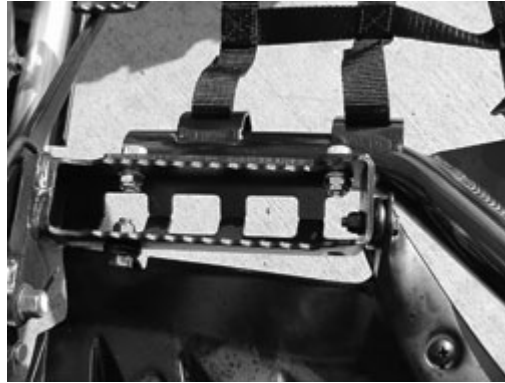

4) Install the nets following the diagram:

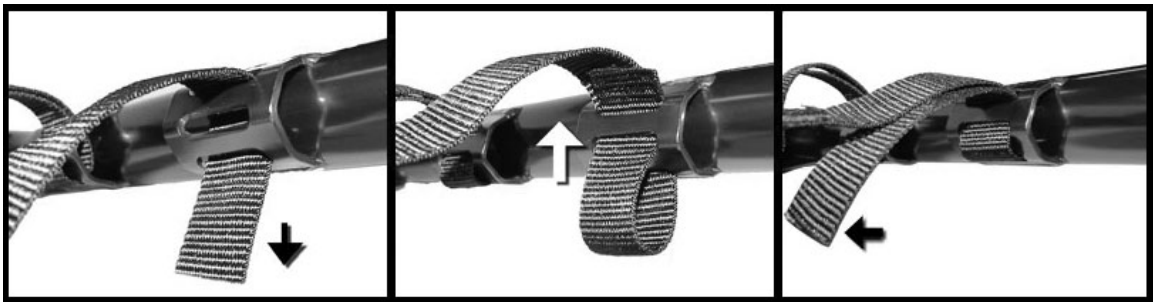

5) Re-check all the bolts and nuts for tightness



6) Enjoy the ride and be safe.
