


## Alba Racing 211-T1 TRX 400EX, TRX 400X Standard Nerf Bars Installation


1. You are going to lace the net/ webbing onto each nerf. See diagram below.

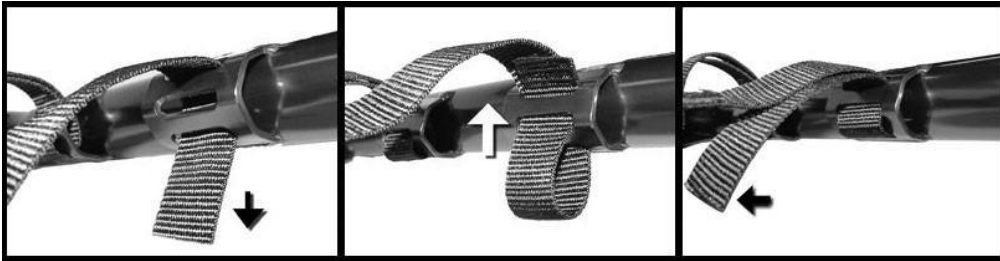

2. Use the picture below for a reference. You will need the chrome front mount bar (X), 2 chrome clips (check marks) and two #6 bolts. Mount the bar in front of the frame V on top of the lower frame with the 2 bungs pointing downward and the C- clips going around the lower frame member. Install the 2 bolts but do not tighten them.



3. Slide the left side nerf bar on the front mount bar. Line up the outside hole on the rear nerf bar mount with the hole in the footpeg. Insert a bolt and lightly tighten a lock nut. Repeat this for the right side

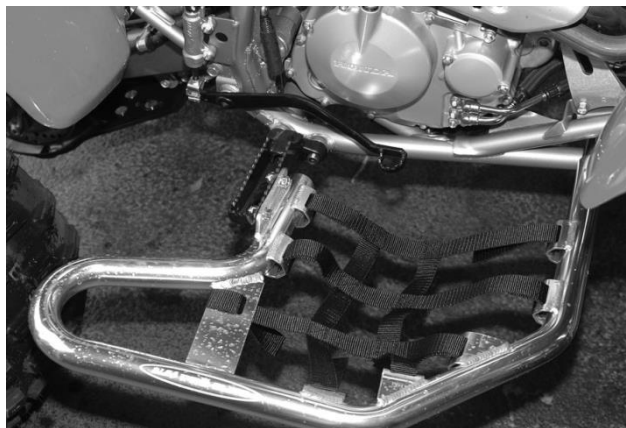

**NOTE: There is no heel guard shown in the picture.**

**KEEP YOUR HEEL GUARD ON. IT IS DANGEROUS TO RIDE WITHOUT IT!!!**

4. Now insert the inner rear mount bolt. Please note--There are some years which do not have a hole in the footpeg. In this case you will need to drill a 3/8" hole in the footpeg using the hole in the nerf bracket as a guide. (Line up and mark with a pen). Once this is done insert your bolt.
5. Now tighten the 4 rear bolts and then tighten the 2 front bolts. **Be careful not to overtighten the 2 front bolts.** They are small and can break.
6. After your 1st ride check all the bolts for tightness. After several rides (or sooner depending on length of rides) make sure to continue checking to ensure all bolts remain tight.